






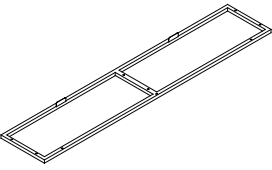


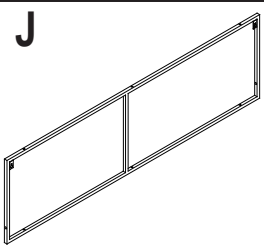
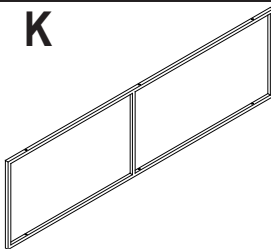
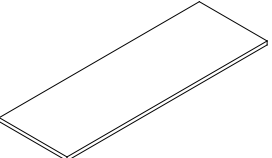

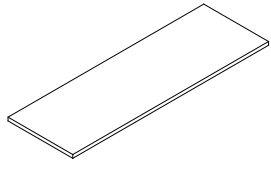
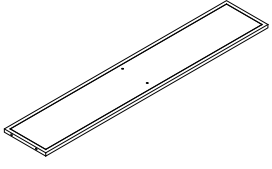
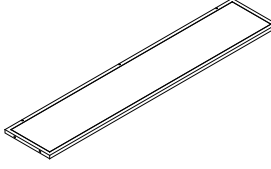

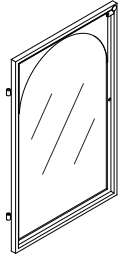


# Assembly Instruction


## HARDWARE LIST

<b>A</b> 	<b>B</b>  M6x25mm	<b>C</b>  M4x10mm	<b>D</b> 	<b>E</b> 
1 PC	30 PCS	4 PCS	4 PCS	4 PCS
<b>F</b>  Ø4*30mm	<b>S</b> 			
4 PCS	2 PCS			


## PART LIST

<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 	<b>K</b> 
1 PC	1 PC	1 PC	1 PC	1 PC
<b>L</b> 	<b>M</b> 	<b>N</b> 	<b>O</b> 	<b>P</b> 
1 PC	1 PC	1 PC	1 PC	1 PC
<b>Q</b> 	<b>R</b> 			
2 PCS	2 PCS			

- Do not use power tools to assemble your furniture.  
Power tools may strip or damage the parts.


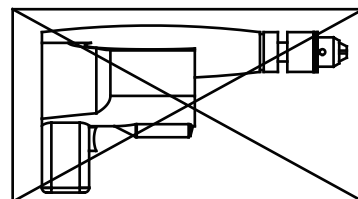


Explosive View

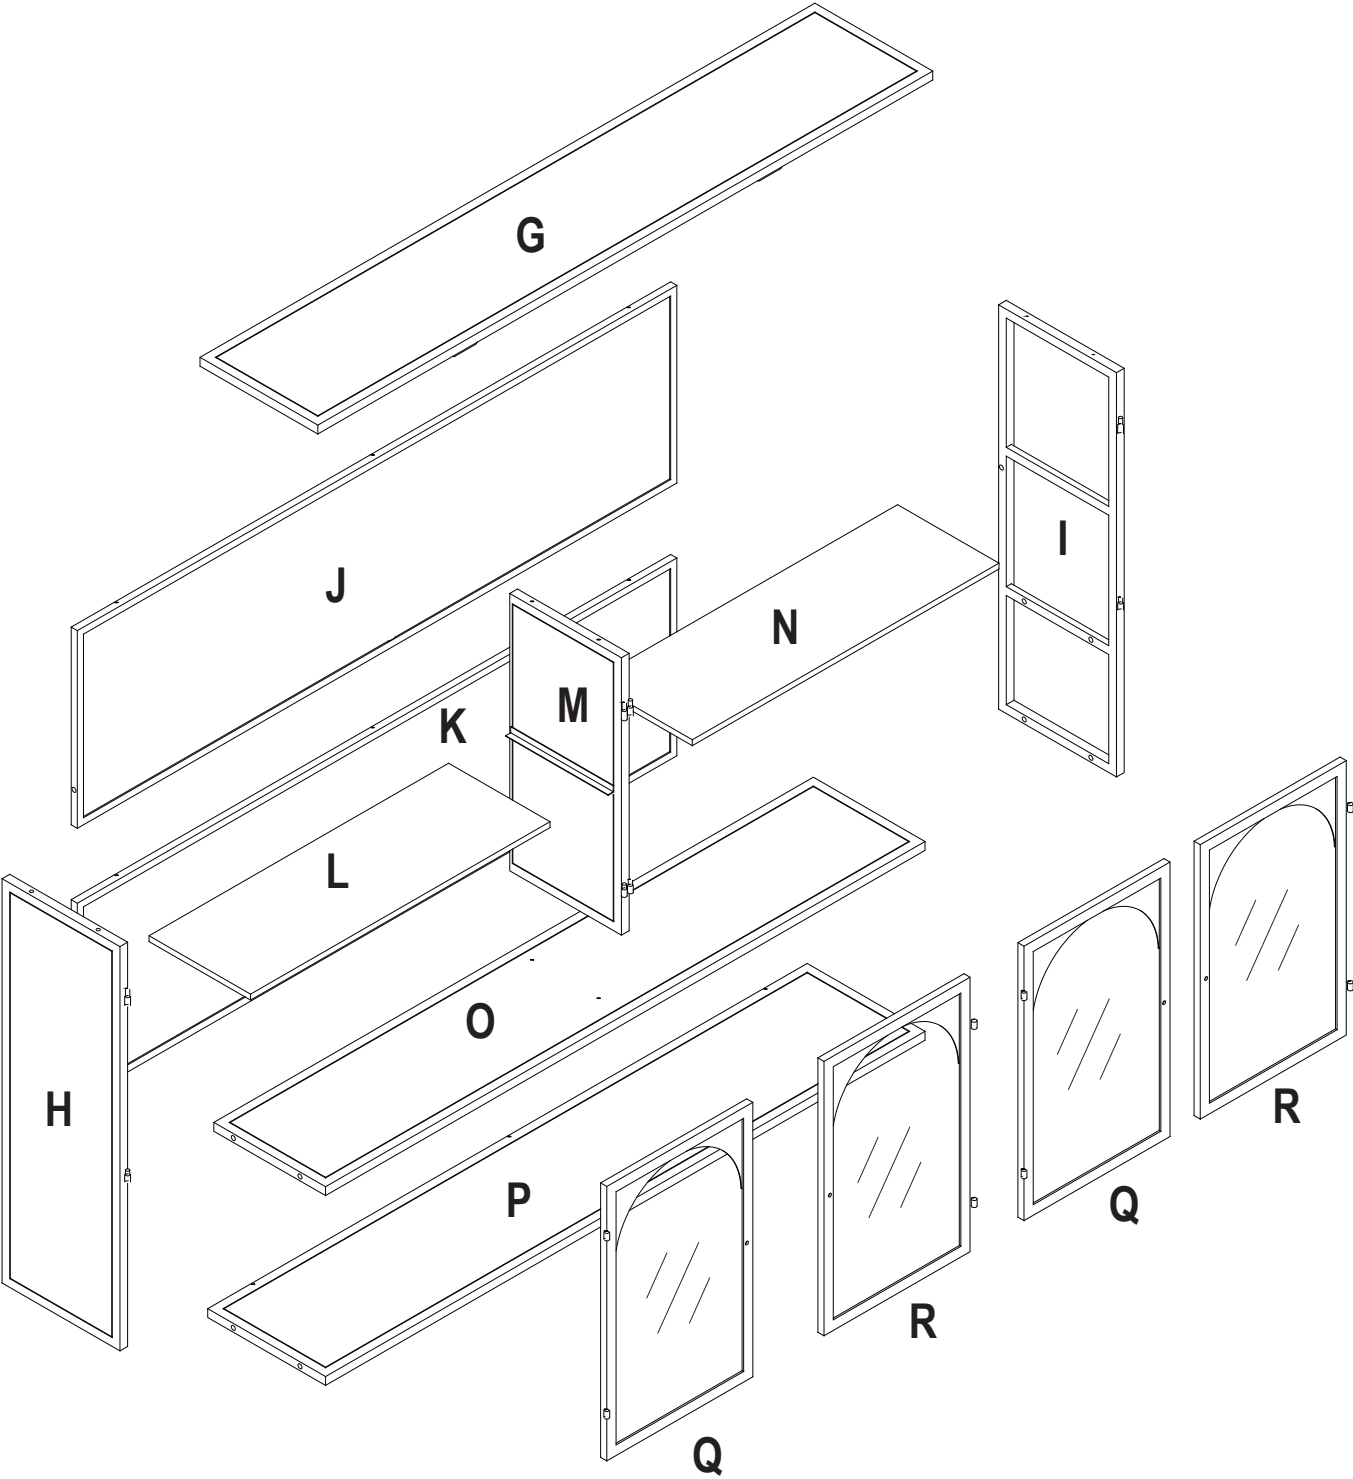

**IMPORTANT NOTE:** DO NOT tighten all screws and bolts until completely assembled


**Step 1**

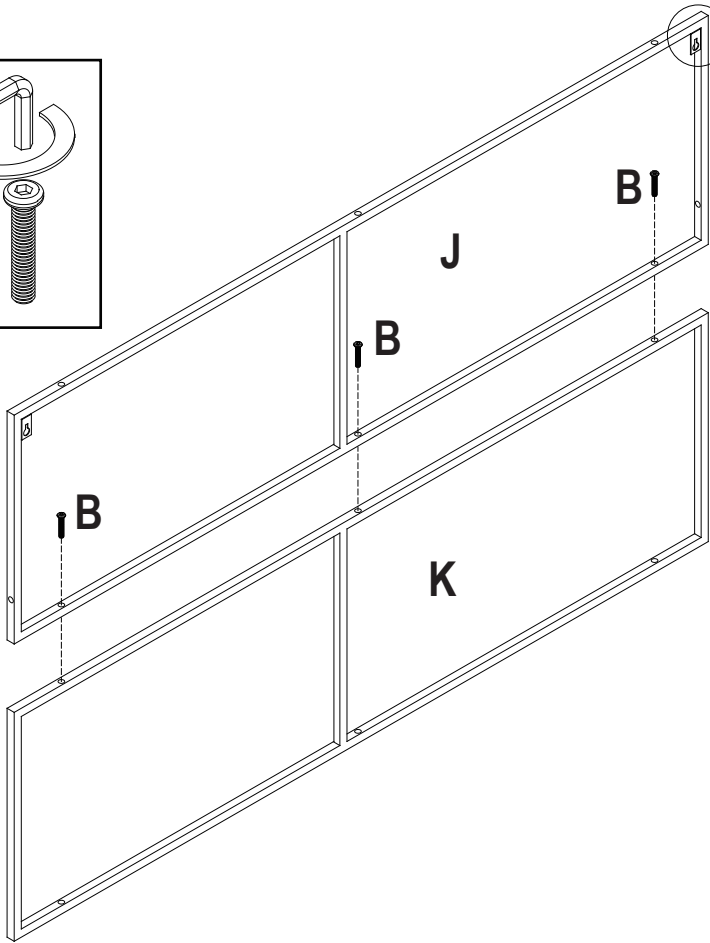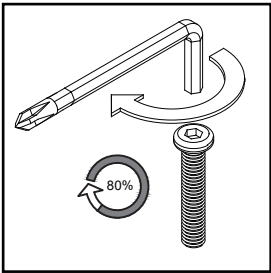

**B X 3 PCS**


**A X 1 PC**

**Step 2**

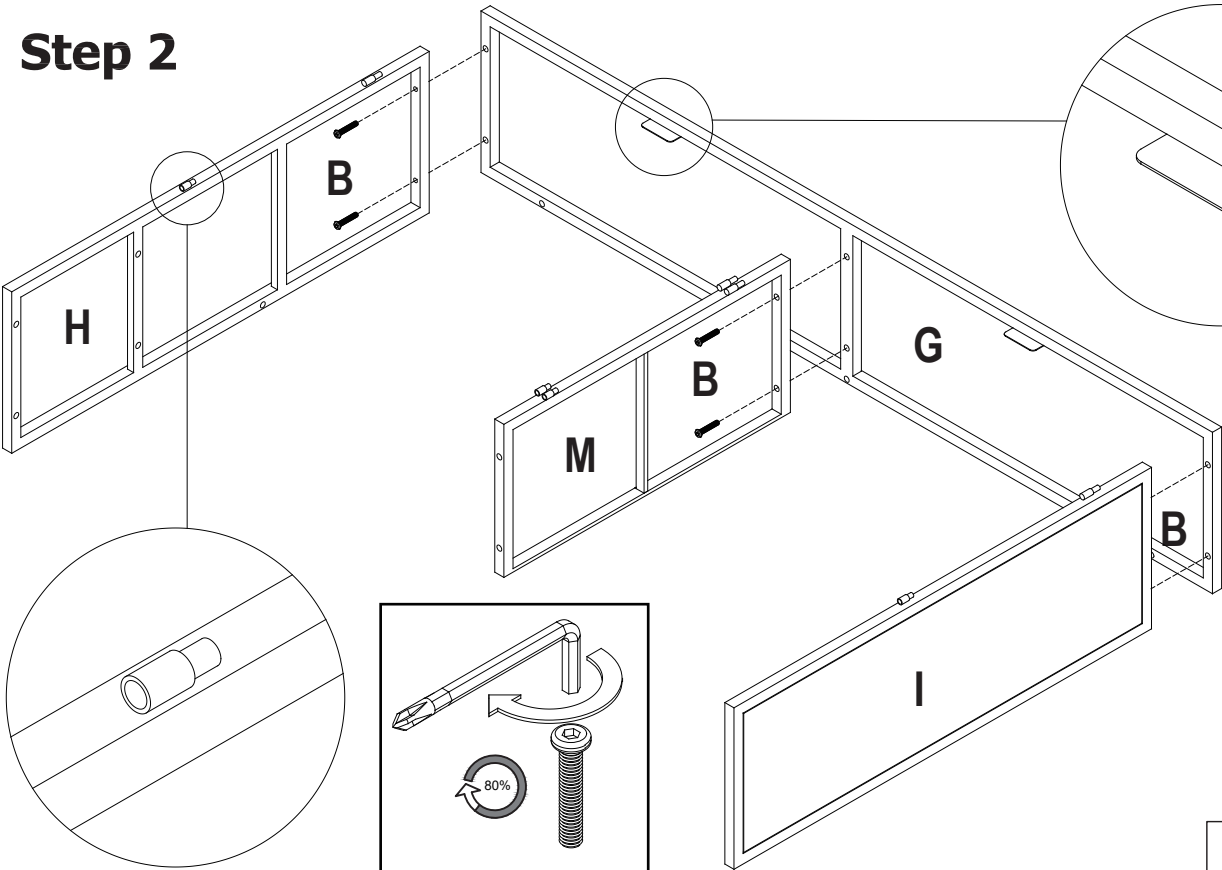


**B X 6 PCS**



### Step 3

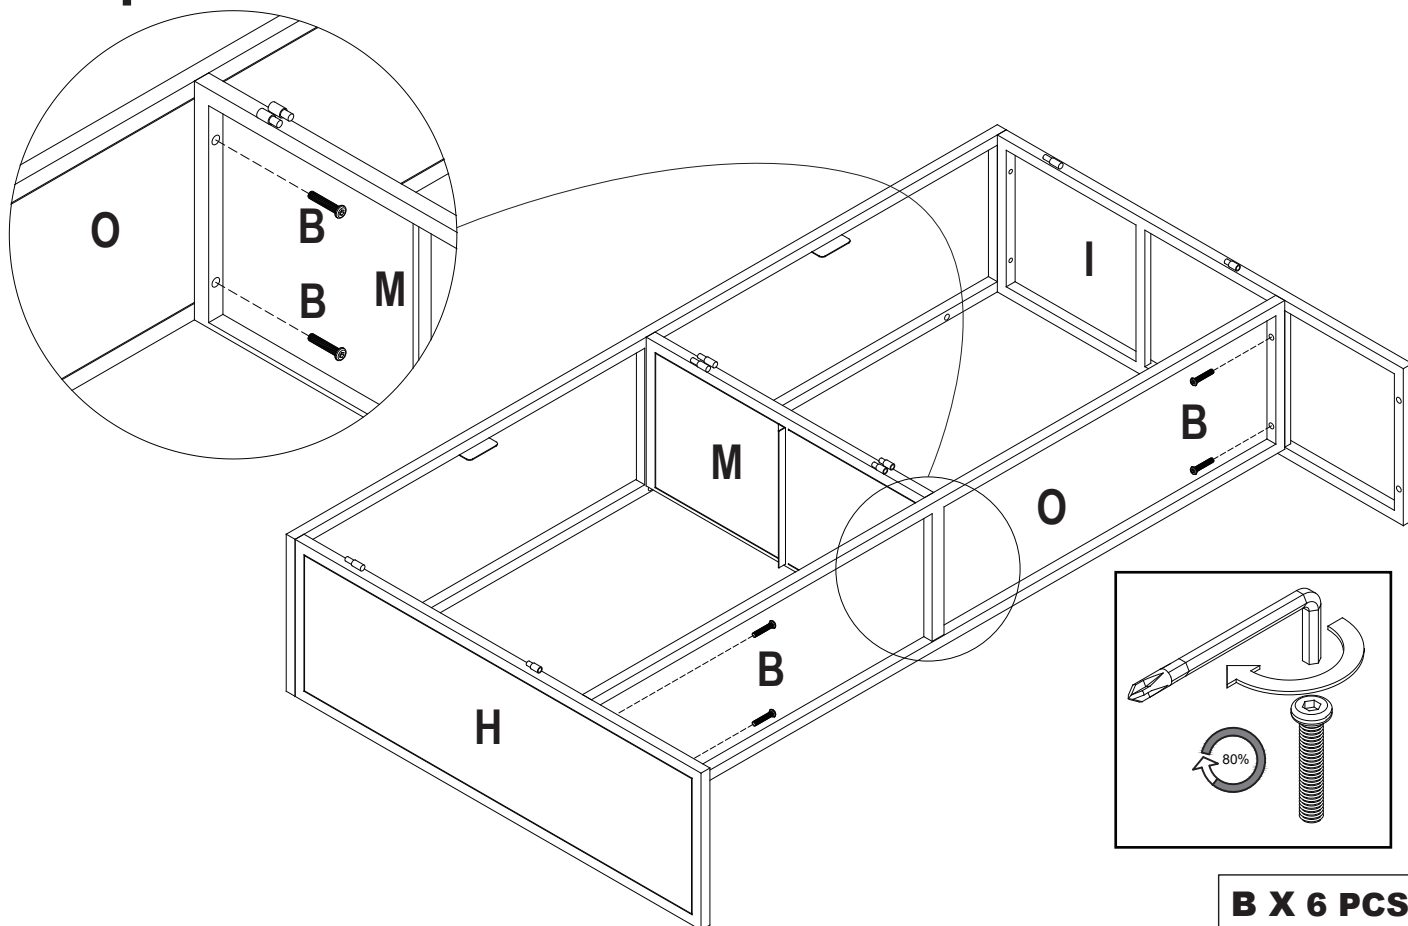

### Step 4


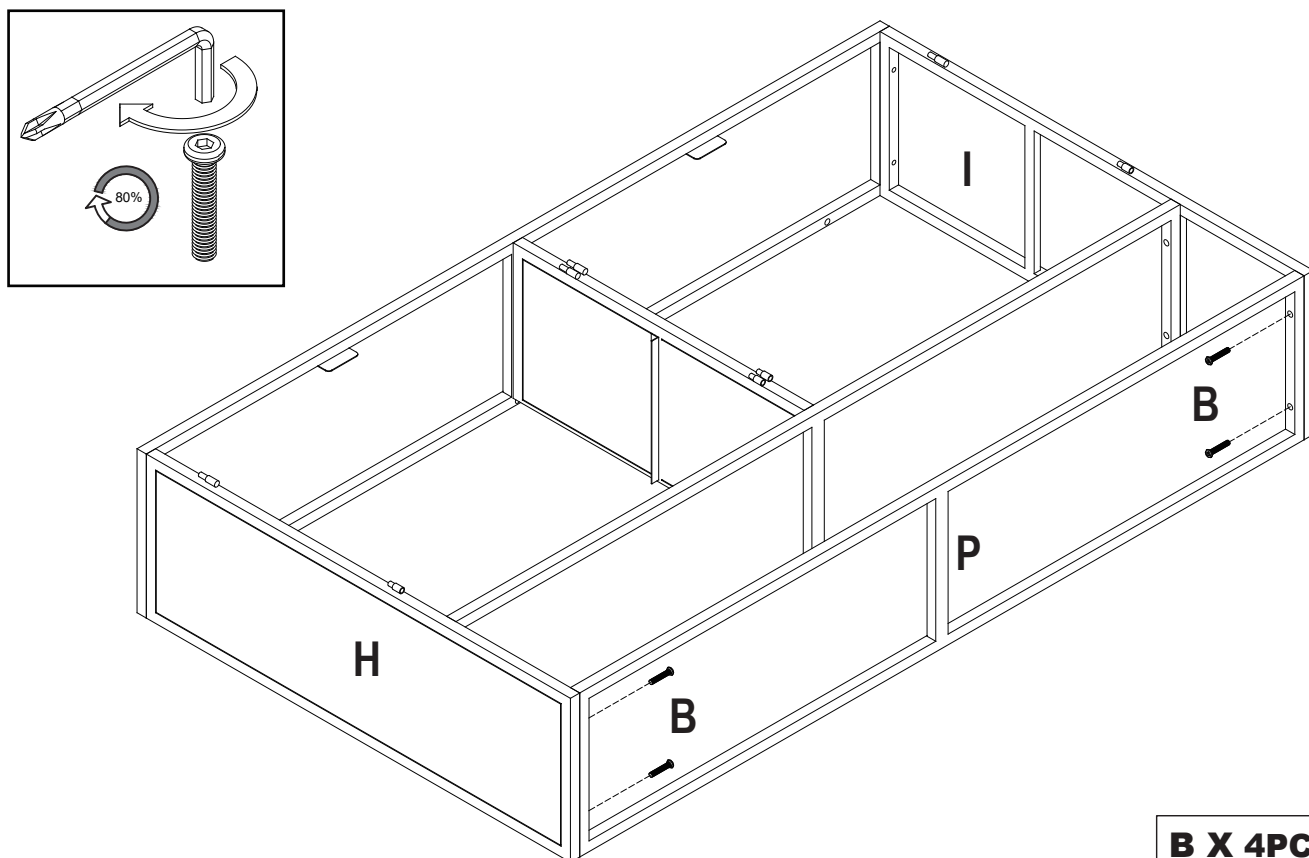


## Step 5

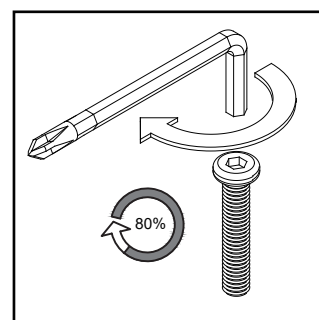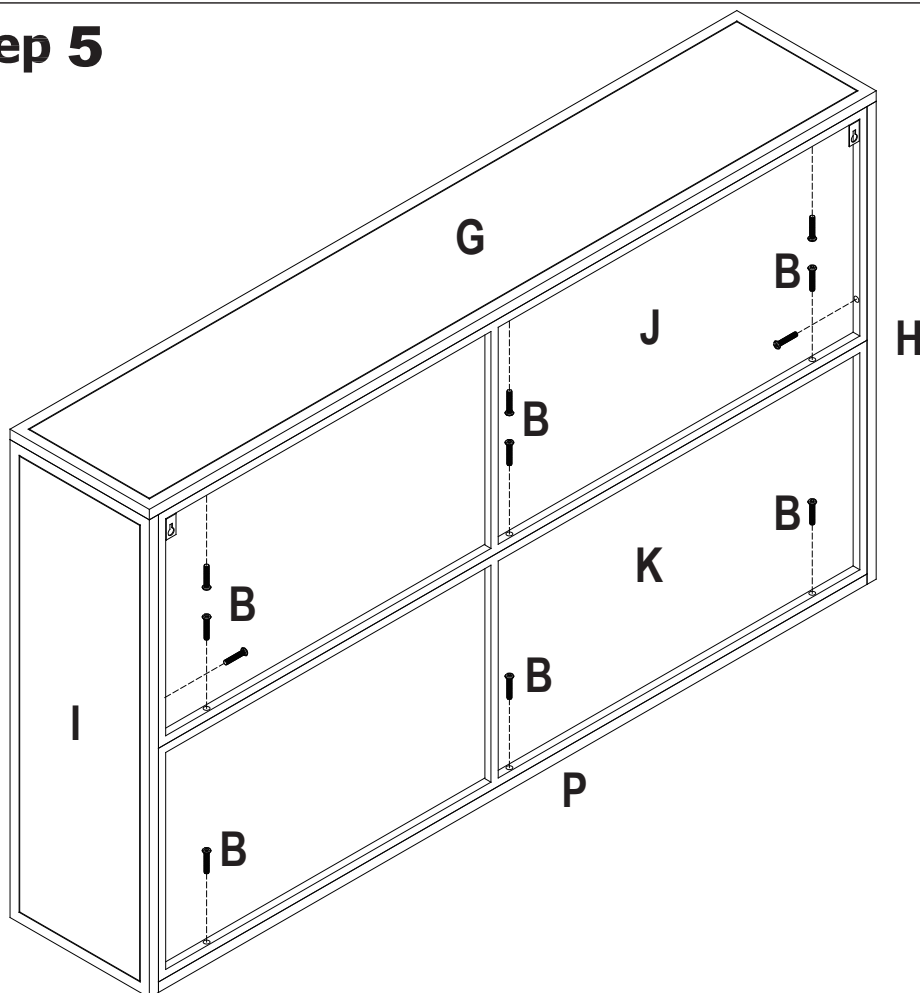


**B X 11 PCS**


## Step 6

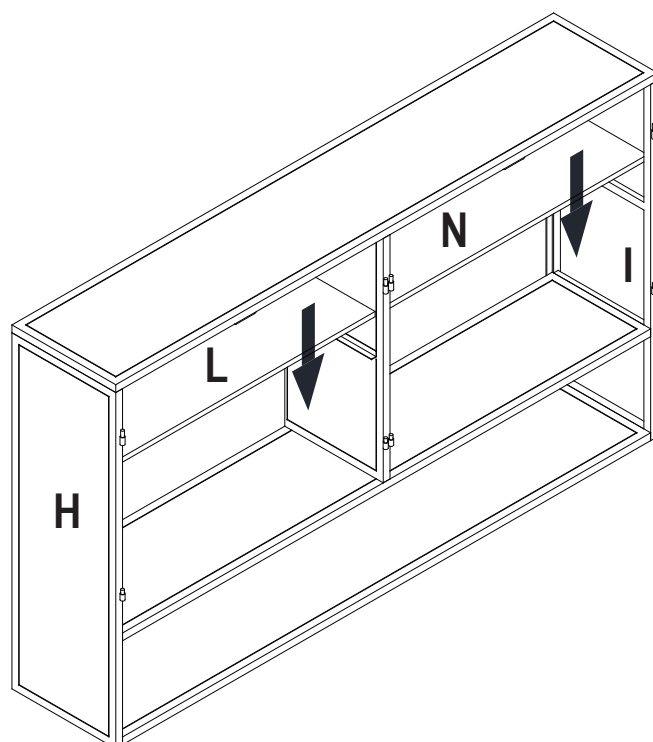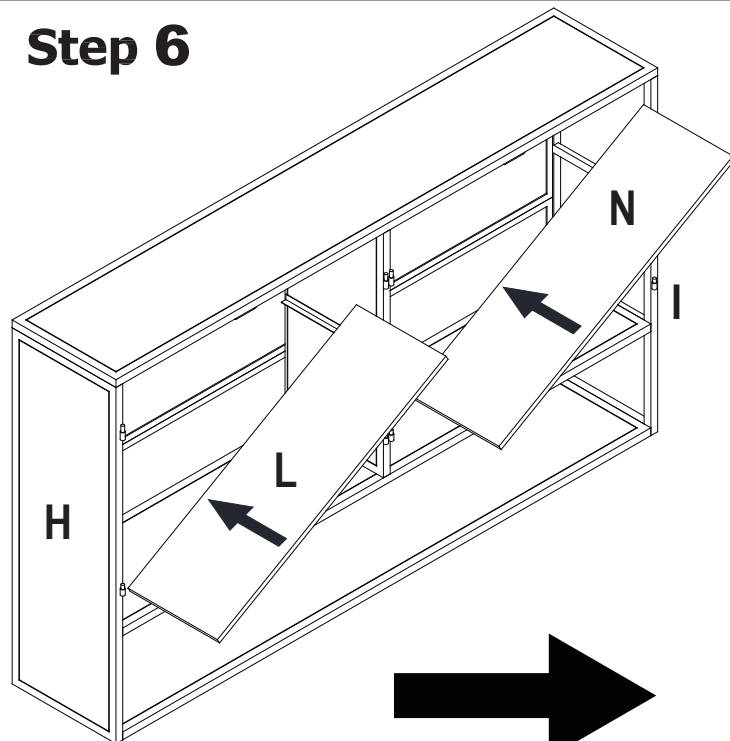

Step 7

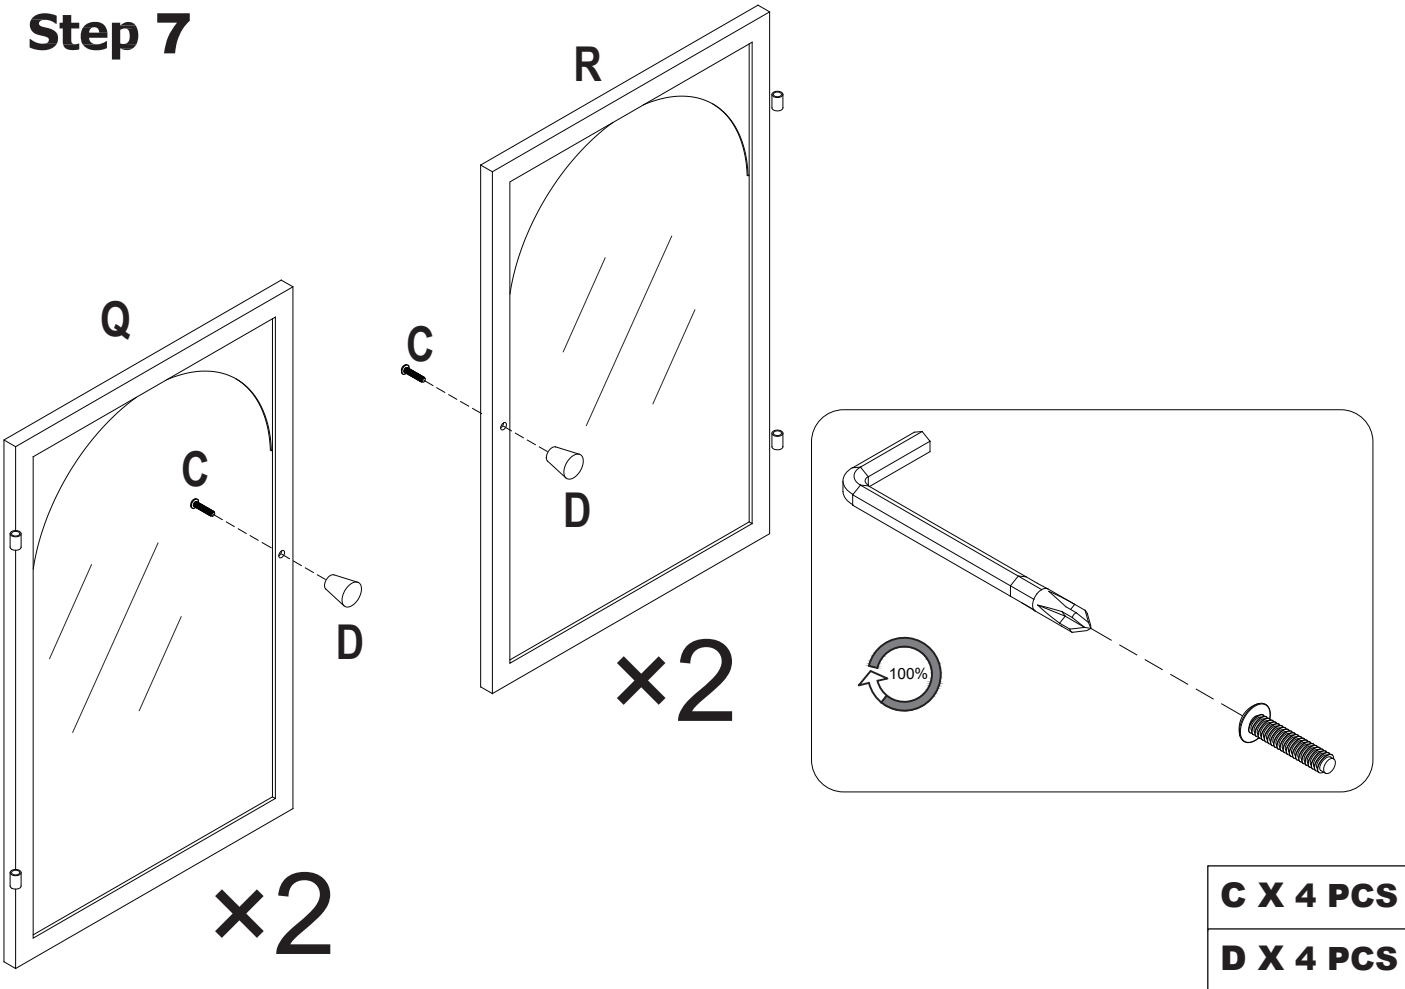


Step 8

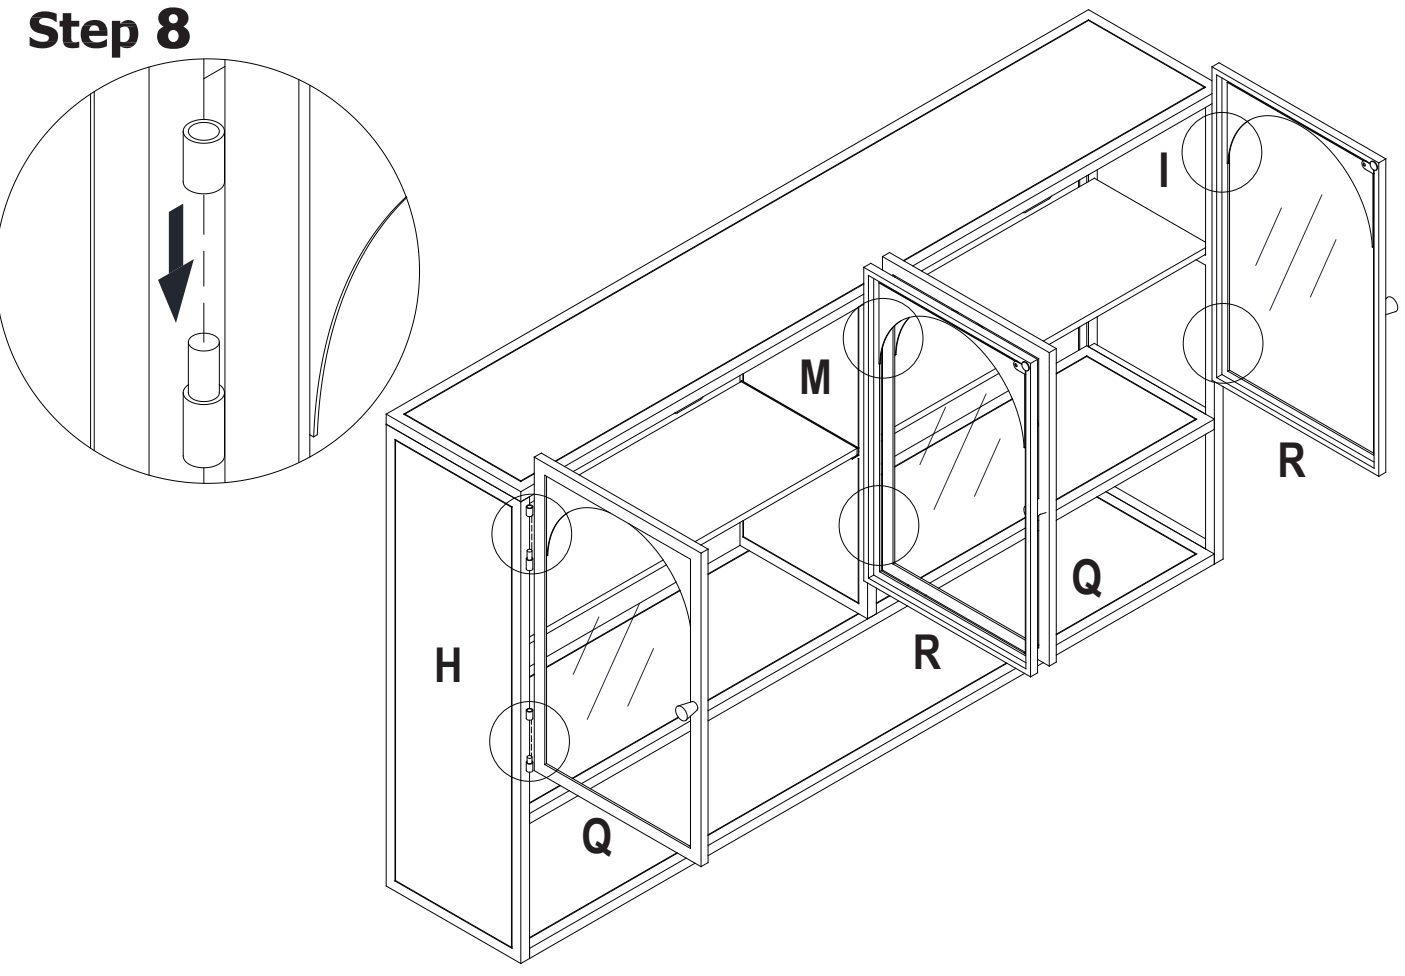


## Step 9


①

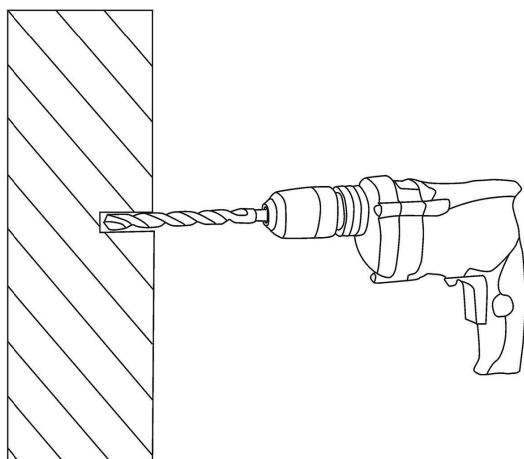


②

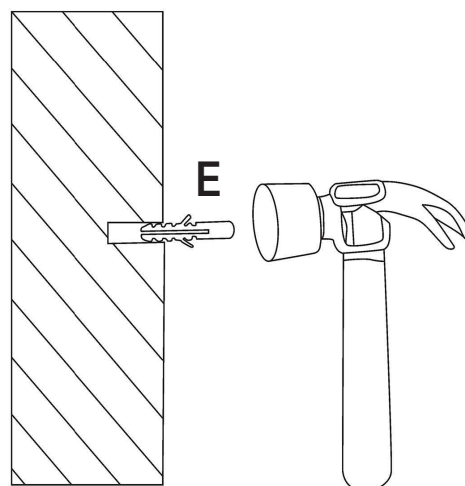

③

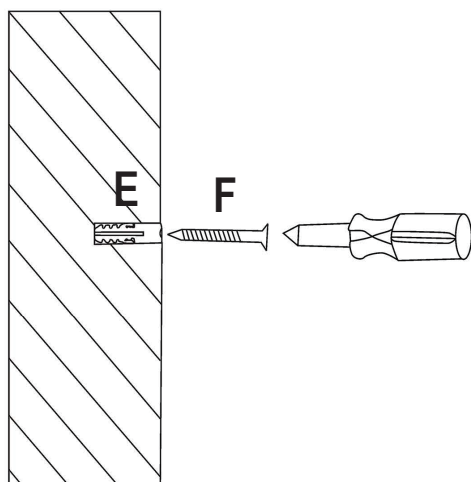




④

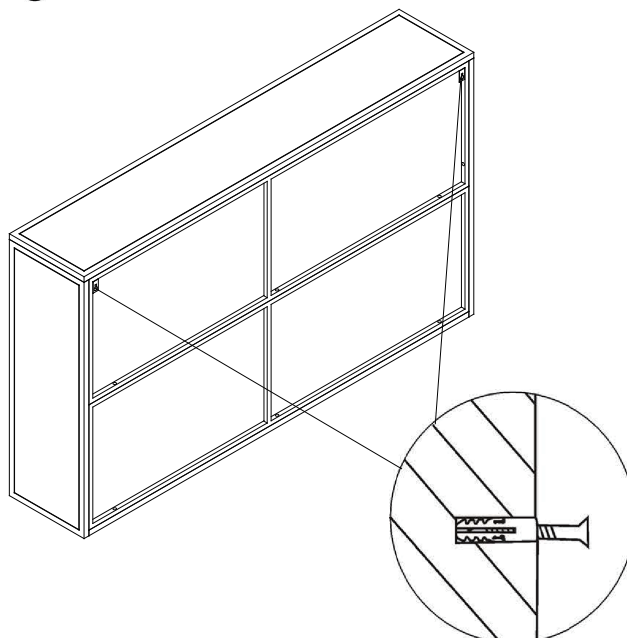

**E X 2 PCS**

**F X 2 PCS**

## Step 10

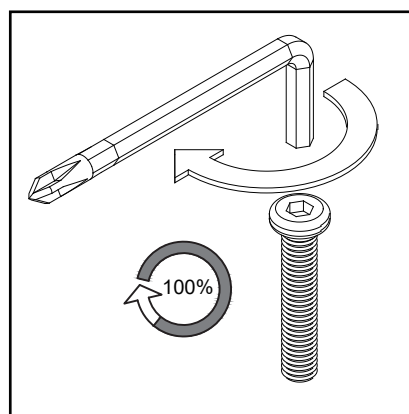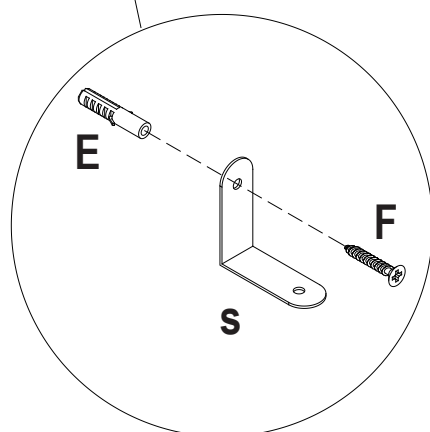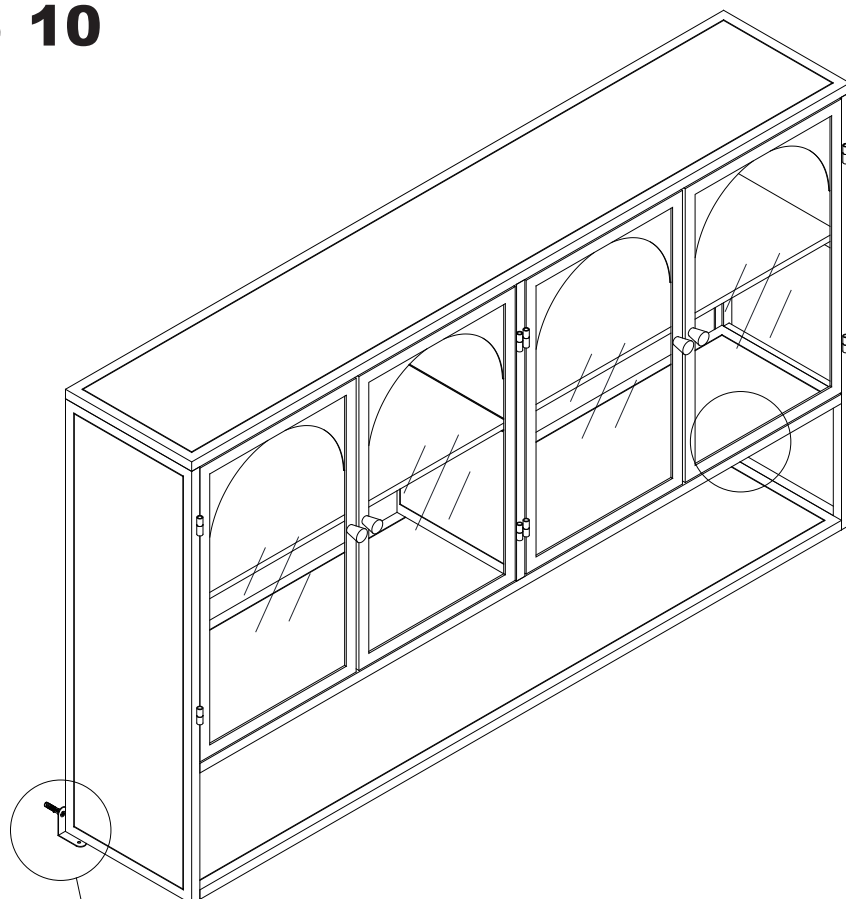

**NOTE:**AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

**S X 2 PCS**

**E X 2 PCS**

**F X 2 PCS**