
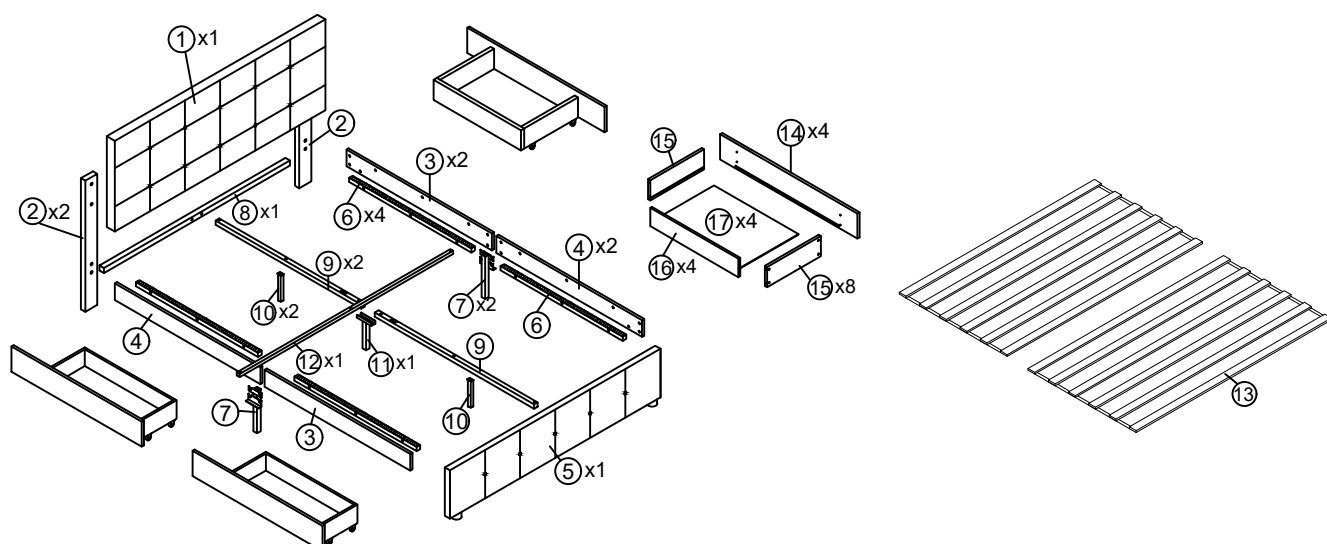


ASSEMBLY INSTRUCTION






WF322440/WF322444

TIPS







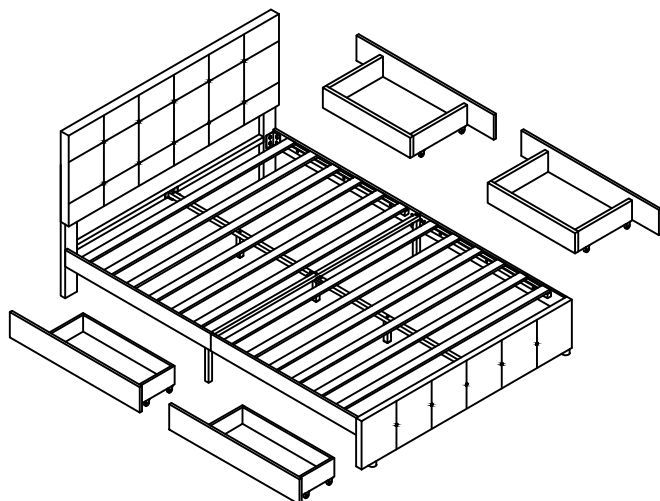





1. This product is divided into 2 parcels for delivery. They may not arrive at the same time. Please wait patiently.
2. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
3. Insert the screws in holes and tighten the screws, but not too tight, 70%~80% is ok, finally tighten all the screws. If some issues happened that some screws can not target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
4. 2 people are recommended to finish

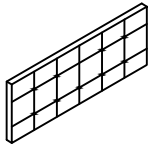



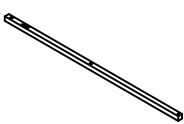











Part List WF322440


1  Head board x1	8  Head board cross barx1	15  Drawer boardx8	16  Drawer boardx4
17  Drawer bottom boardx4			

Part List WF322444


2  Head board legx2	3  Side railsx2	4  Side railsx2	5  Foot boardx1
6  Side rails support barx4	7  Side rails support legsx2	9  Center support barx2	10  Middle support legx2
11  Connected support legx1	12  Cross barx1	13  Slatsx12	14  Drawer outer boardx4

Hardware List WF322444

A  Allen Key	B  Bolts(M8x50mm)x4	C  Bolts(M8x18mm)x36	D  Bolts(M8x40mm)x21
E  Stopperx4	F  Two hole ironx2	G  "7" Connectorx4	H  Center support bar fittingsx2
I  Wheelx16	J  Drawer fittingsx32	K  Drawer fittingsx32	L  Nails (M4x40mm)x2
M  Legsx2	N  Nails (M3x20mm)x32		

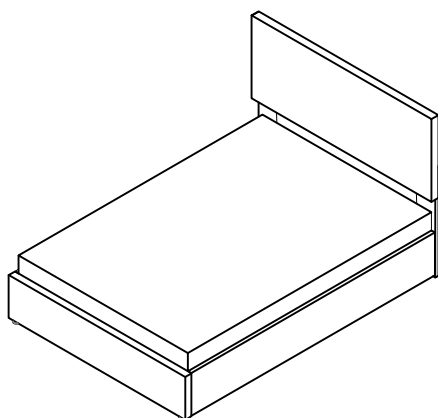

**This product is not suitable for
mattress recessed type.**

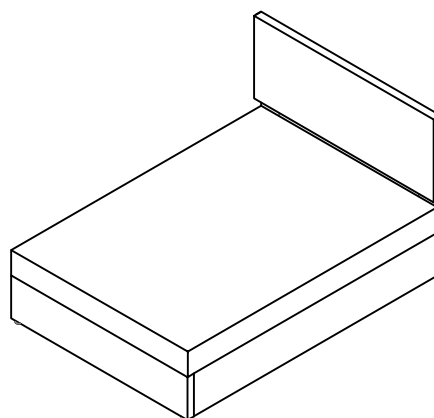

**This product is suitable for
placing mattresses on the top.**

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1:

Ⓐ  × 1

Ⓑ  × 4

Fix the Headboard legs (2) to the Headboard (1) with Bolt B by using Allen key A. You can chose the hole a and c ,or b and d.


(Befestigen Sie die Kopfteilbeine (2) mit der Schraube B und dem Inbusschlüssel A am Kopfteil (1). Sie können die Löcher a und c oder b und d wählen.)

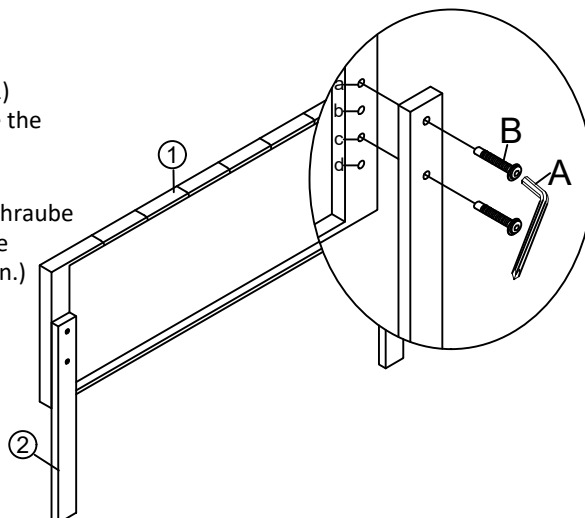

Step 2:


Ⓐ  × 1

Ⓒ  × 4

Ⓔ  × 2

Fix the Headboard cross bar (8) to the Headboard legs (2) with Bolt C and Two hole iron F by using Allen key A.



(Befestigen Sie die Querstange des Kopfteils (8) mit der Schraube C und dem Zweilochisen F unter Verwendung des Inbusschlüssels A an den Beinen des Kopfteils (2).)

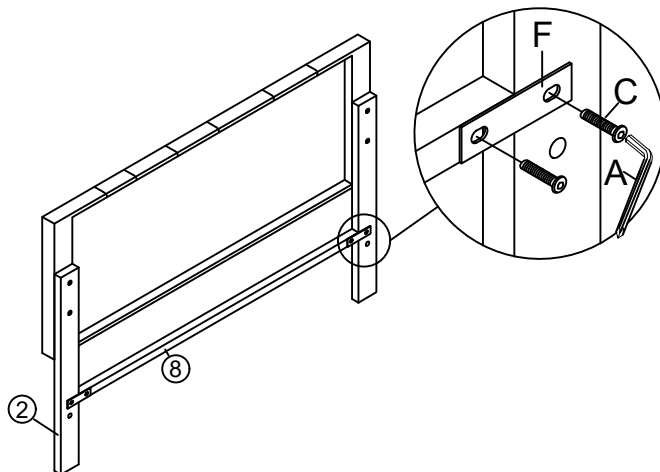

Step 3:

Ⓐ  × 1

Ⓓ  × 12

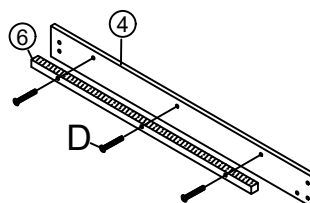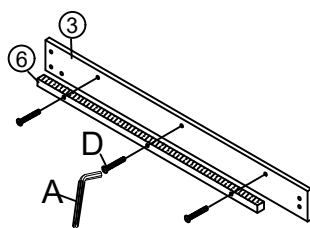

Connect Siderails (3) and (4) to Siderail support bar (6) with Bolts D by using Allen key A.

(Verbinden Sie die Seitenschienen (3) und (4) mit der Seitenschiene (6) mit den Schrauben D mit Inbusschlüssel A.)


Step 4x2:

Fix the Siderail support leg (7) to the assembled siderail with Bolt C by using Allen key A.

Ⓐ  × 1

Ⓒ  × 8

NOTICE:
Please assemble (3) and (4) together.

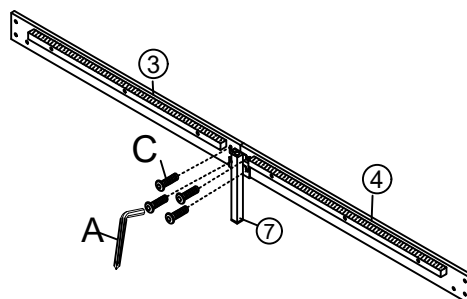


Step 5:

Fix the legs M to the Footboard (5) with Nails L by using Electric drill or Screw driver.

Ⓐ  × 1

Ⓕ  × 2

Ⓜ  × 2

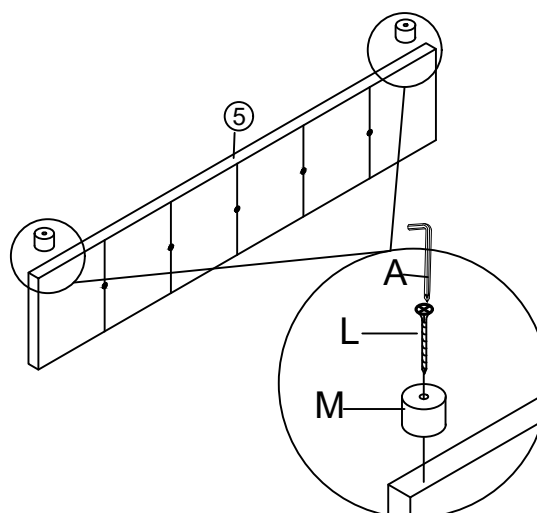


Step 6:

Fix the assembled siderail to the Headboard legs (2) and footboard (5) with Bolt C and "7" Connector by using Allen key A.

Ⓐ  × 1

Ⓒ  × 16

Ⓖ  × 4

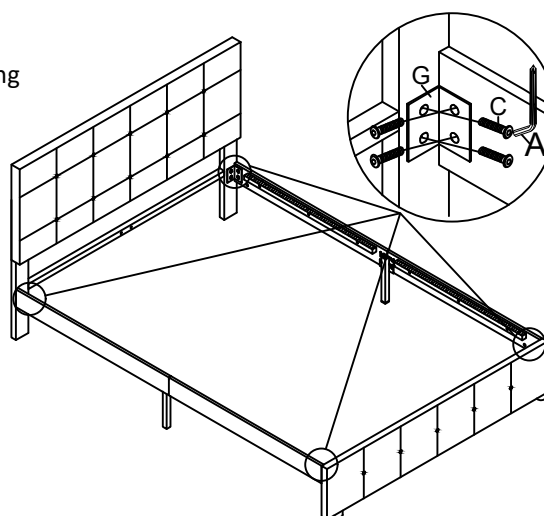


Step 7:

Ⓐ  × 1

Ⓓ  × 4

Fix the Middle support leg (10) to the Center support bar (9) with Bolt D by using Allen key A. Fix connected support leg (11) to the Center support bar with Bolt D by using Allen key A.

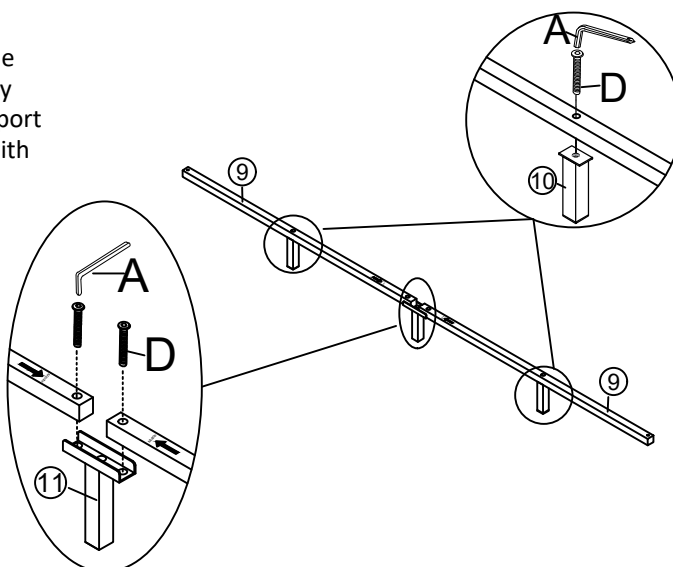


Step 8:

Ⓐ  × 1

Ⓒ  × 4

Ⓗ  × 2

Fix the Center support bar fittings H to the Headboard cross bar (8) and foot board (5) with Bolts C by using Allen key A.

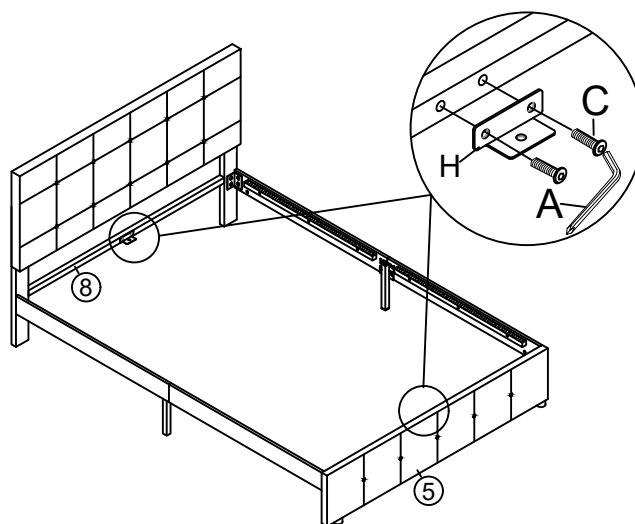


Step 9:

Ⓐ  × 1

Ⓓ  × 2

Fix the Center support bar (9) to the headboard cross bar (8) and foot board (5) with Bolts D by using Allen key A.

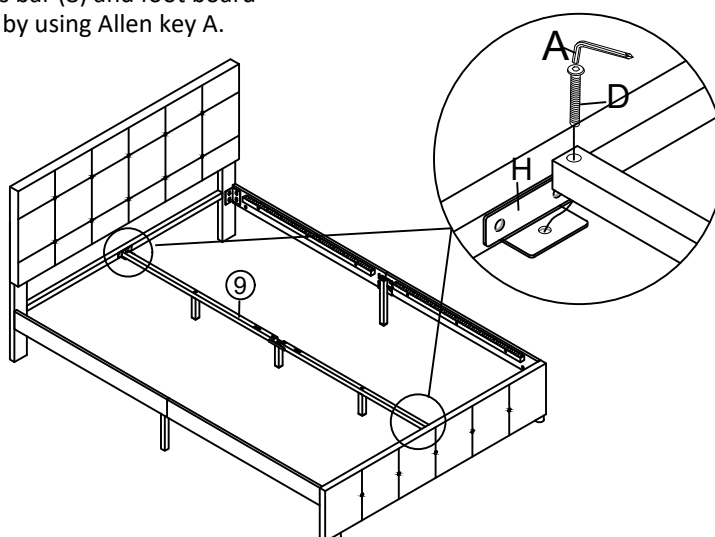


Step 10:

Ⓐ  × 1

Ⓓ  × 3

Fix the cross bar (12) to the side rails support legs (7) and Connected support legs (11) with Bolts D by using Allen key A.

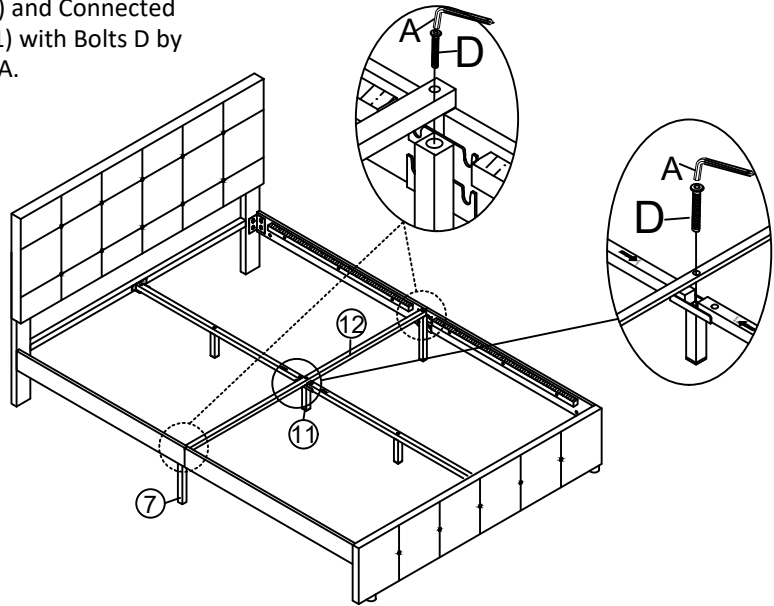


Step 11:

Ⓐ  × 1






Ⓒ  × 4

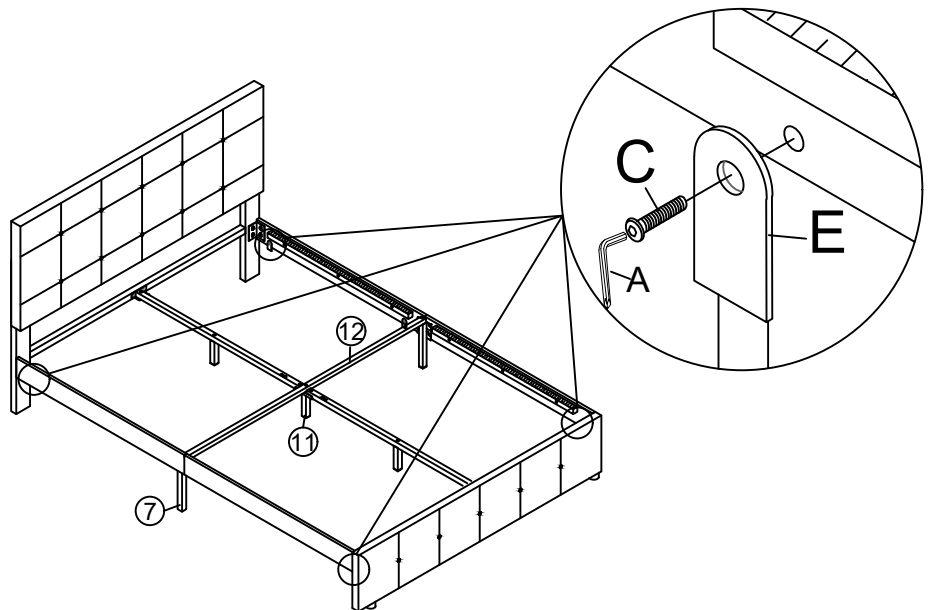Ⓔ  × 4


Fix the stopper E To the Siderails with Bolts C by using Allen key A, you can chose right side or left side according to your requirements.



Step 12x4:


- Ⓐ  × 1
- Ⓘ  × 16
- Ⓙ  × 32
- Ⓚ  × 32
- Ⓝ  × 32

Assembled the drawers with drawer fittings J and K. Fix the drawer wheels I with Nails N by using electric drill or screw driver.

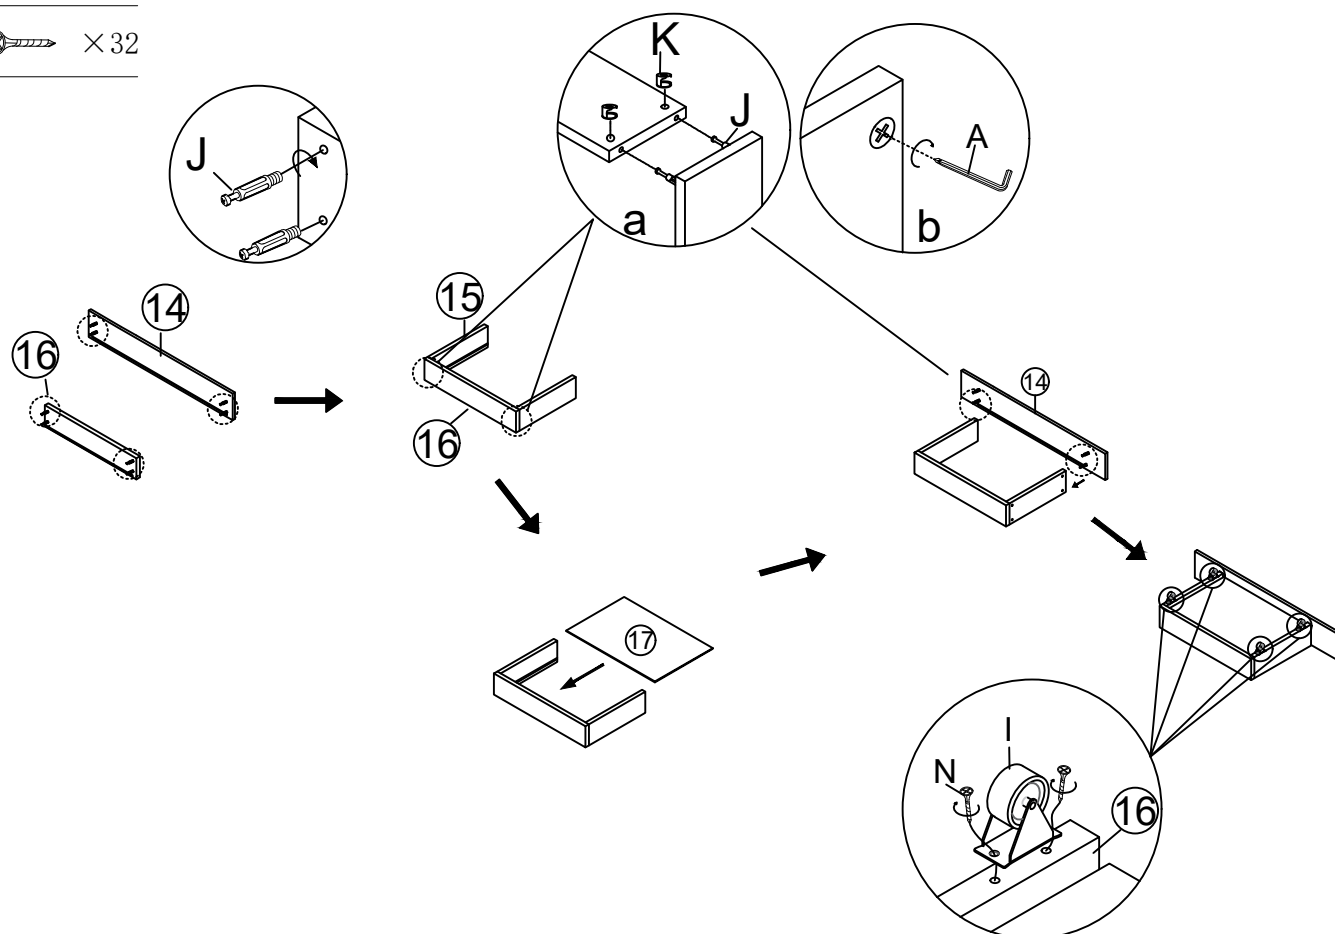

Step 13:

Fix the slats (13) to the side support bar (6).

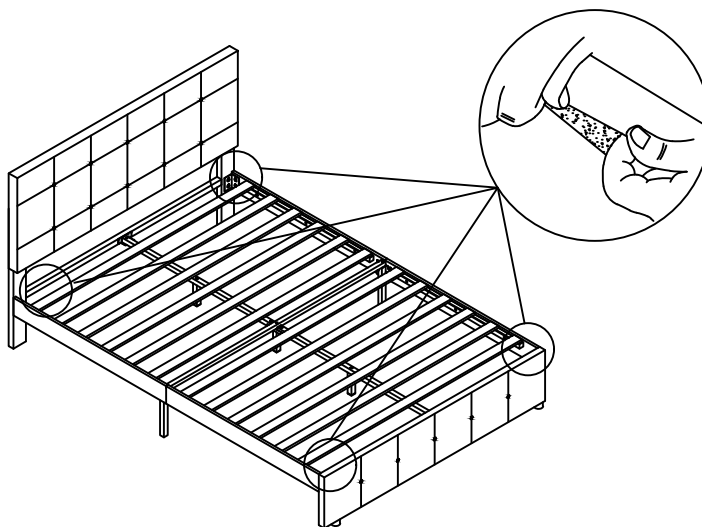

Step 14:

Push the drawers into the bed, then assembly is finished.

